

ASSEMBLY INSTRUCTION



MODEL : CF 9390-E (3')

A		1 pc
B		1 pc
C		2 pcs
D		1 pc
E		1 pc
F		1 pc
G		2 pcs
H		4 pcs
I		1 pc
J		3 pcs


Packing Hardware

1		1 pc
	M5 x 70mm	
2		9 pcs
3		52 pcs
4		24 pcs
5		16 pcs
6		6 pcs


Step 1: The trundle unit is reversible and can be installed on the left or right side according to your individual needs and home space.

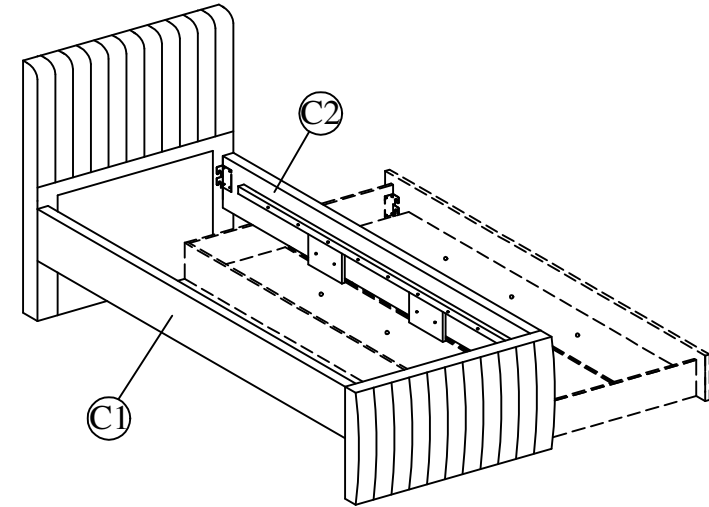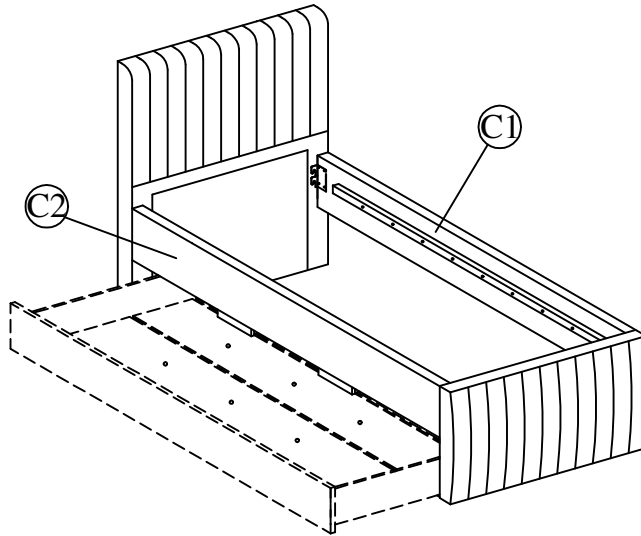


Step 2: Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

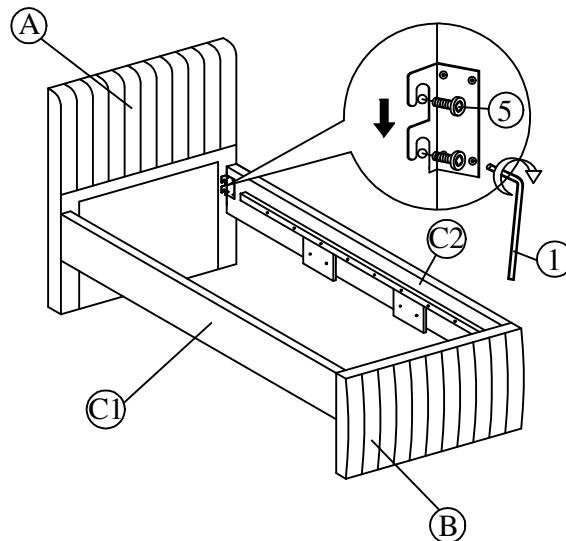


Step 3: Affix the Slat (D) to the side rail support wood. Tighten all the 4 corner .

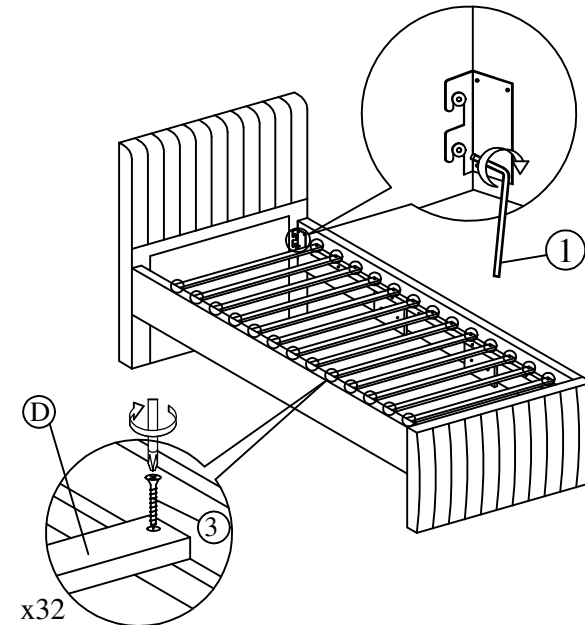


Step 4 : Attach trundle side panel (G) and trundle front panel (E) to trundle back panel (F) by pushing the bracket down to fit it.

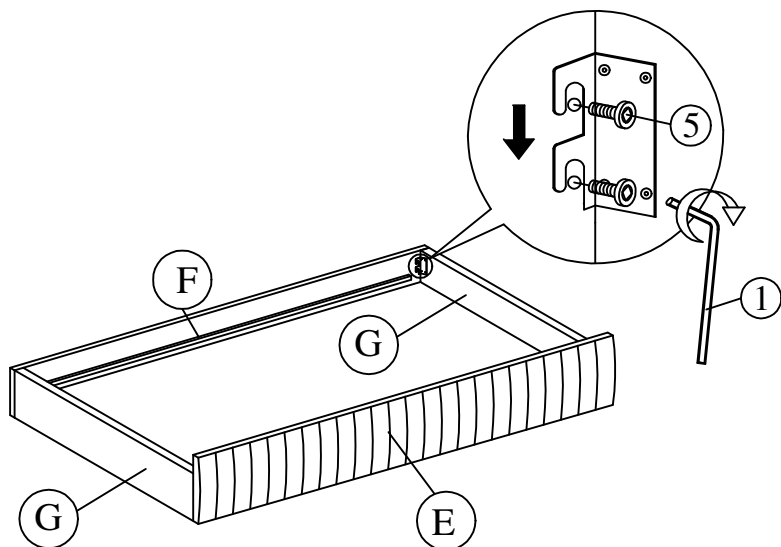


Step 5 : Affix the roller (7) to the slat (I) follow the marking on the slat (I).

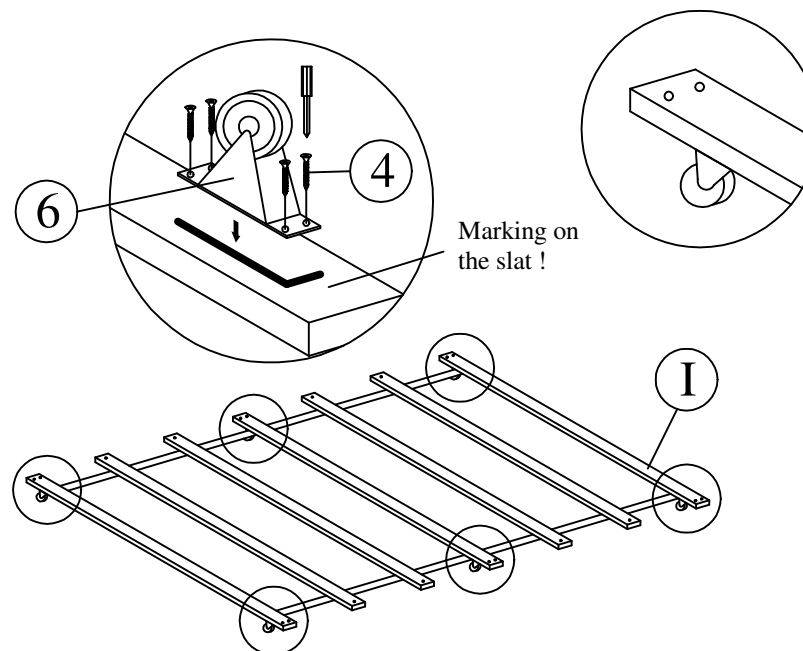

Step 6 : Tighten the 4 Corner with Allen Key (1) . Place the wooden blocks (H) at the corner of the trundle and fix the slat (I) to the trundle at (E) & (F).

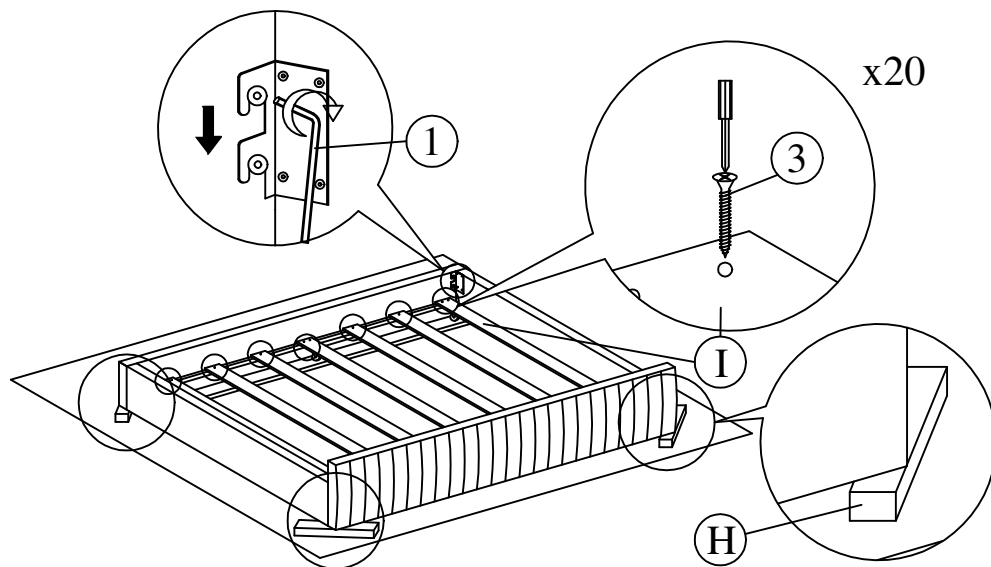

Step 7 : Tighten the panel (J) with CSK screw (2) .

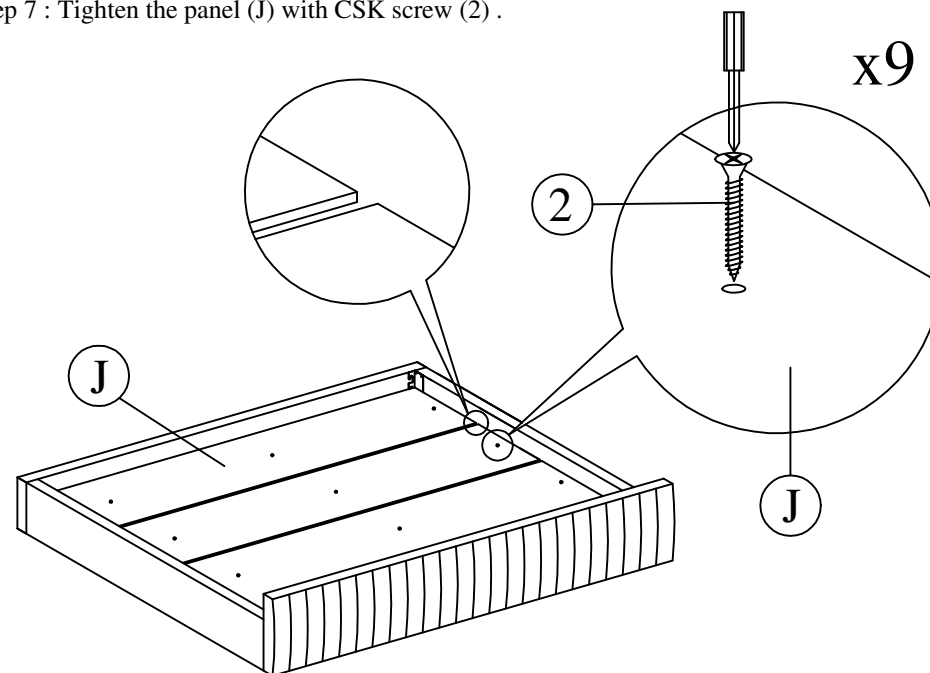

Step 8 : Assembly is complete.

