




Jalen Dining Chairs

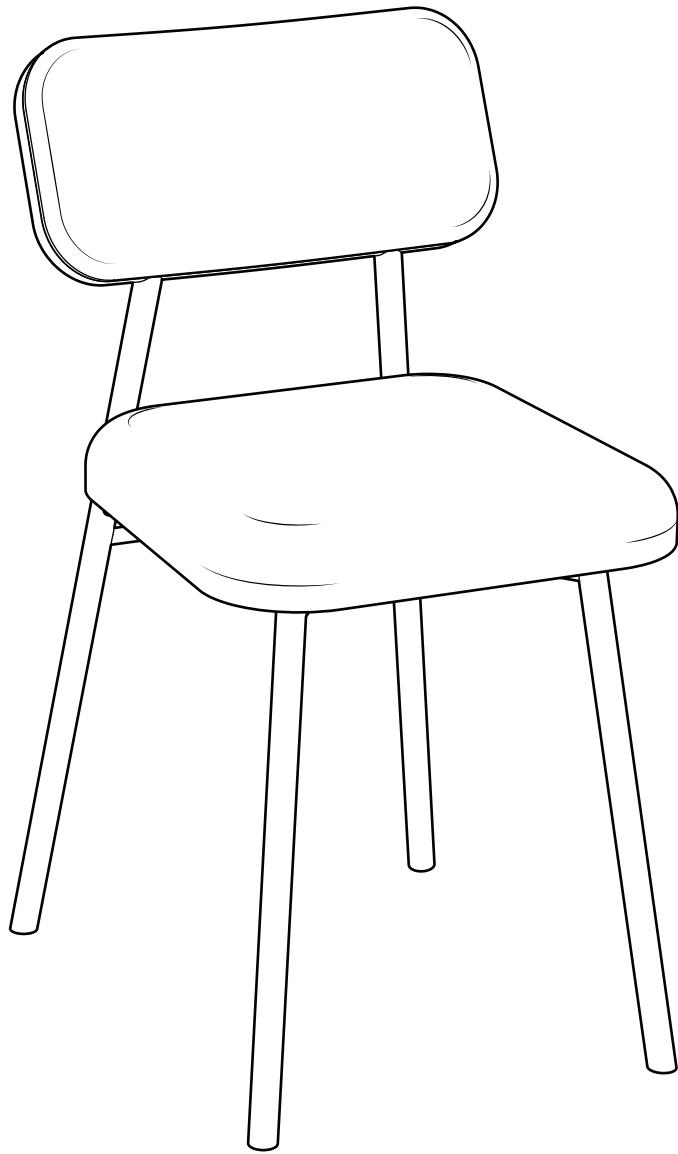


Fittings




A M6x12mm bolts x 32



B M6x40mm bolts x 16

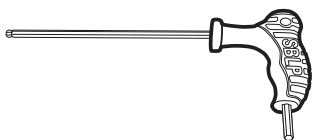


C Allen Key x 1




D Connecting sheet x 4


Part Number

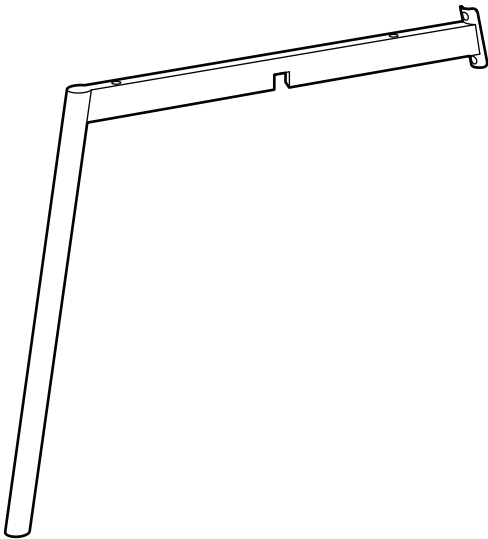


① X4

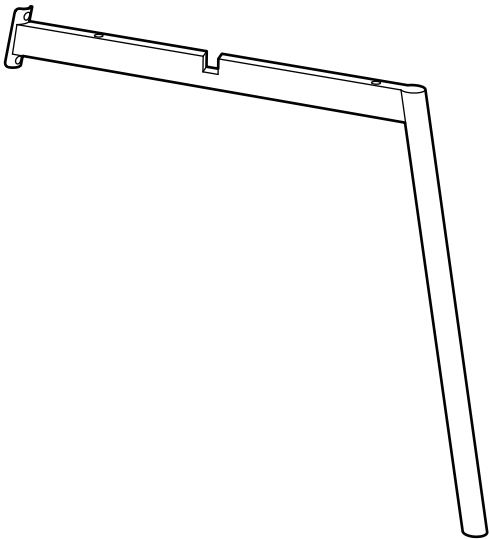

② X4

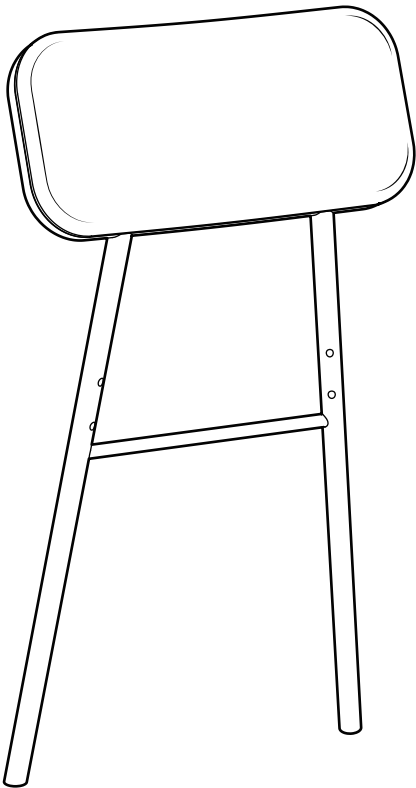



③ X4

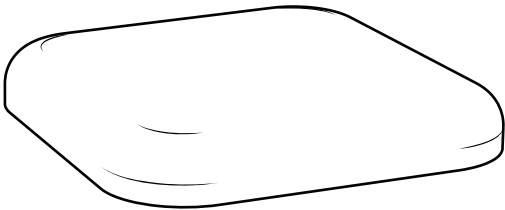

④ X4

1








A M6x12mm bolts x 16 **C** Allen Key x 1 **D** Connecting sheet x 4

WARNING!
PLEASE DO NOT FULLY
TIGHTEN THE BOLTS AT
THIS STEP.

70%

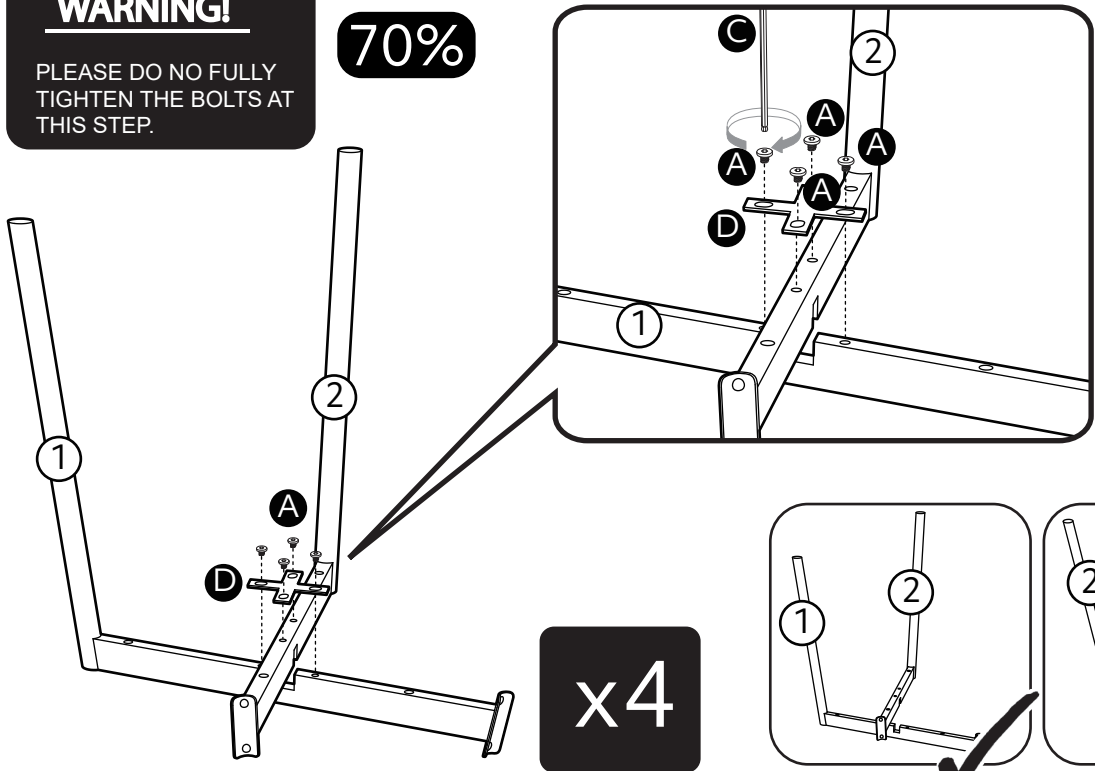


2


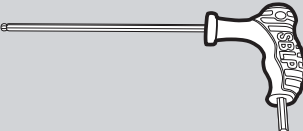
A M6x12mm bolts x 16 **C** Allen Key x 1

WARNING!
PLEASE TIGHTEN THE
BOLT IN THIS STEP.

100%

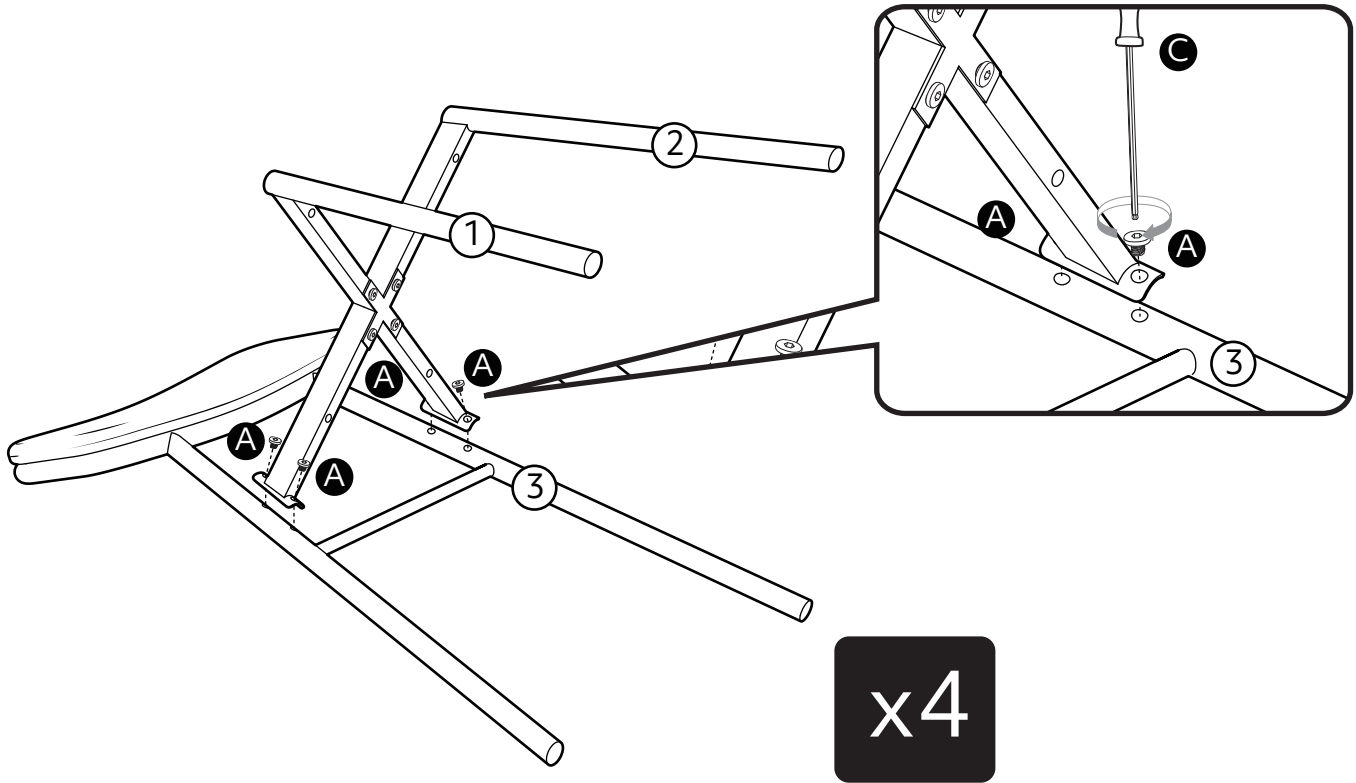

3

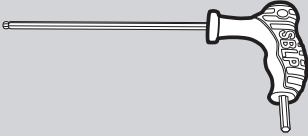



B M6x40mm bolts x 16
 C Allen Key x 1

WARNING!

PLEASE DO NOT FULLY
TIGHTEN THE BOLTS AT
THIS STEP.


70%

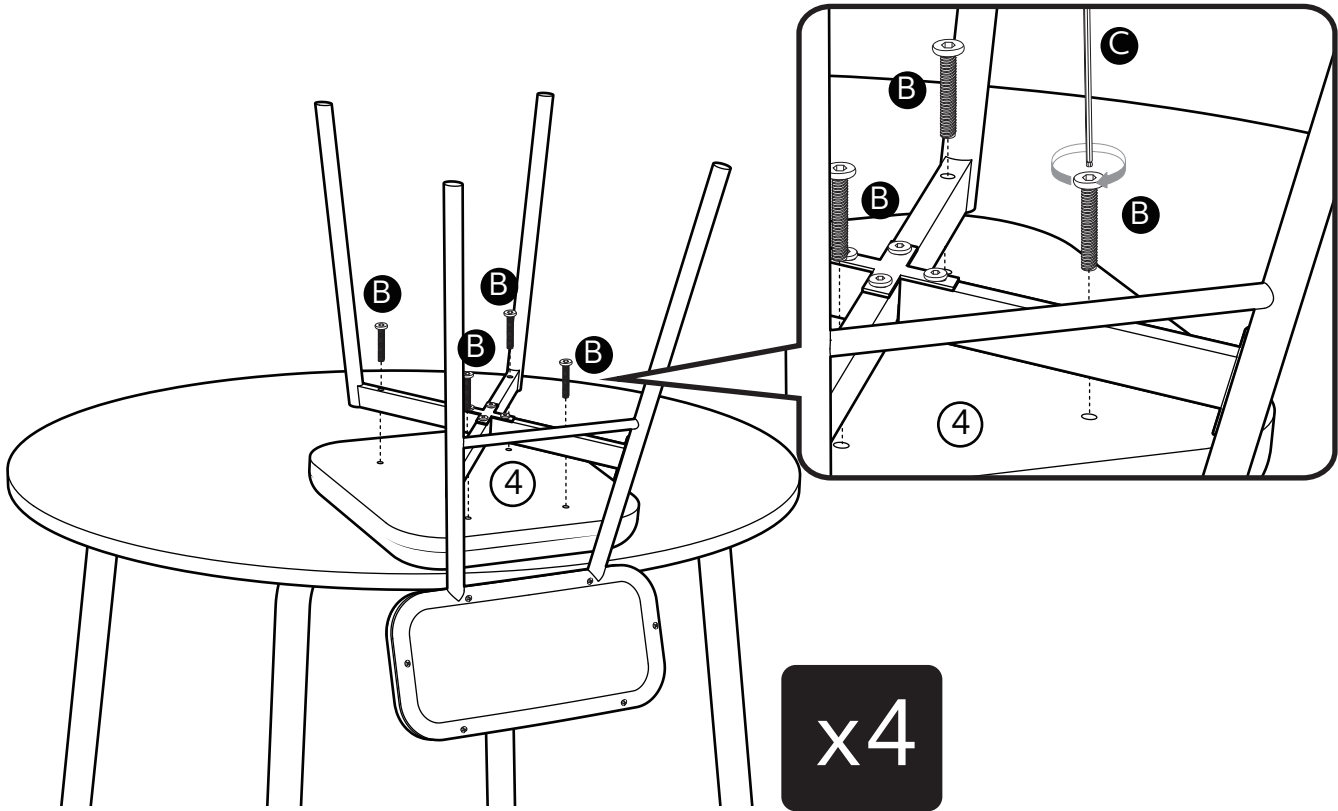

4

x4

a:

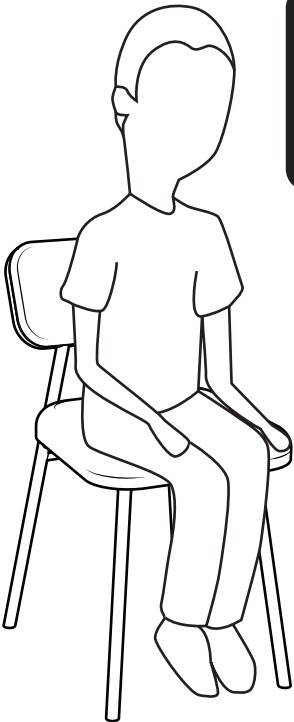

WARNING!



CAREFULLY SIT ON THE CHAIR
AND MAKE ADJUSTMENTS
TO ENSURE THE LEGS ARE
FLAT EVEN ON THE FLOOR

b:

WARNING!

MAKE SURE ALL FOUR LEGS
REST FLAT ON THE FLOOR.
THEN TIGHTEN ALL SCREWS.

100%

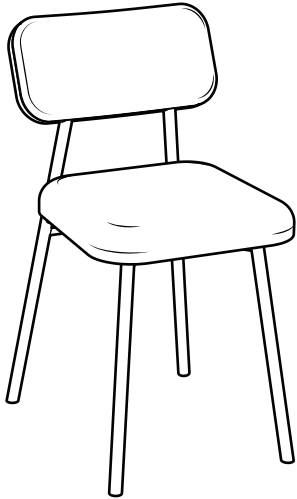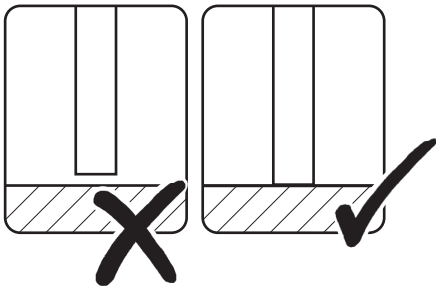

5

x4

