

Product installation drawing


		- 50				_		arrac	. 011	uı	awing	5	esses.	4.4
	Model# Coffee table Dimen					of prod	duct 1	000=500+50	0 Versio	n No	A0 Drawin	g No	100	-008
	Tools NO Appearance Specification of					QTY						6110	-	-008
		=)-		3 in 1	screw	26PCS					/ `			
	Straight screwd	iver 2		3 in 1	nut	26PCS			/			_		
		□ 3		woode	n plug	24PCS								1:
	Cross screwedri	ver 4		tapping	screw 35	8PCS						//	1	
	3//) 5	8	grub s	rew	16PCS				/	///	_	$\ \cdot \ $	
	Hammer	6	∞	tapping	screw 6	24PCS								\(\delta\)
		7	A	mecha	nism	2PCS	*							
	you have electric it will be more ea nd faster to asser	sier nble	•											
	NO Part nam	(A)	ension of t		TY NO	Pa	t name	Dimension of th	e part QTY	Luc				
	1 Top boar	d	1000-500-	15	В	Botte	om board	959-460-1		NO C	Part name Leg A		ion of the	
d			10 E		J	Stor	age board	929-430-1	5 1			483	5-120-15	4
			-	275	j.			<i>/</i> ···] -	_			
			/\	-	ļ.,		/							
		/			1	/	Во	ttom board		-		6	\sim	
					> <:		175			1		>: -	. 🙀	-
			_		0			//.					/	· >
		5	1				**							
	- 1					_	/.	8		1		//		
	~					_	Sto	rage board				9/		
					9			1						
					1		* *							
	O Part name	Dimer	sion of the	part QT	NO	Part	name	Dimension of the	- 1					
	D Leg B	4	85•105•15	4	E		brace	959+80+15	part QTY	NO F	Part name			YTD he
								*******			Short brace	430	0-80-15	2
	*	183									· · ·			
			^		İ			*	-	T.				
		/.	$\langle \cdot \rangle$	1_					3					
	'/			•>									/。	•>
	/		,	//	ľ			///	1		'	/	//	
;	·· °/		//				//	/						
	W	//			/					6	60 9/			
					:						V			
								N.	7 (3					
					1. N			1						
72					A 10									
10	ge 1 of 2													

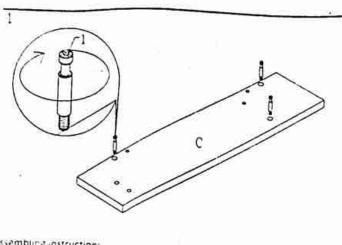


ssembling instruction:

Take out all the parts and confirm that, if all the parts are ready. Put the leg Assembling instruction. (No C) flat, install the 3 in 1 screws (No 1) into the plastic holes.

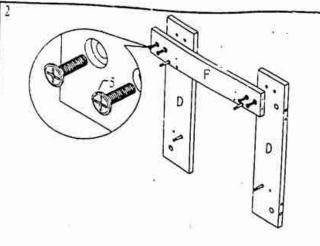


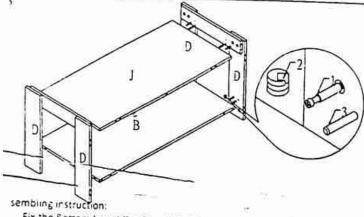


Fix the Bottom board (No.B) and the Storage board (No.J) on the Log B

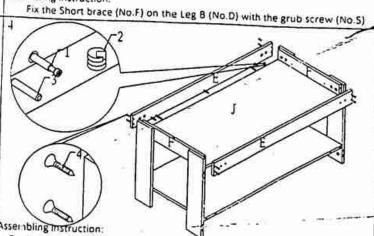

Fix the Long brace (No.E) on the Storage board (No.J) with 3 in 1 screw (No.1) p.D.) with 3 in 1 screw (No.1) and the wooden plug (No.3), then hightening the and the wooden plug (No.3), then hightening the 3 in 1 nut (No.2). Then fix the the Long brace (No.E) with the Short brace (No.F) by tapping screw (No.4).

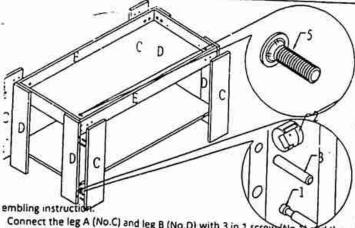


Connect the leg A (No.C) and leg B (No.D) with 3 in 1 screw (No.D) iden plug(No.3), tightening the 3 in 1 nut, and tightening the grub screw

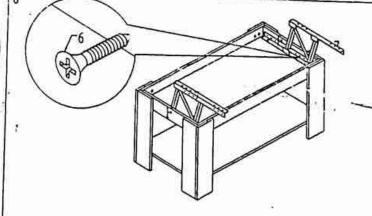


Assembling instruction:

Fix the mechanism (No.7) to the Short brace (No.F) by tapping screw (No.4).

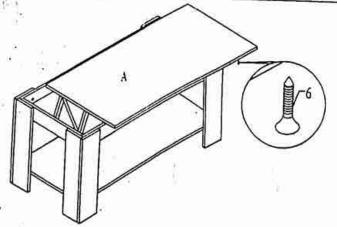

mbling instruction: Fix the mechanism (No.7) to the Top board (No.A) by tapping screw (No.4). and make sure that it can be used.

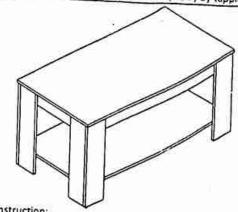

Assembling instruction:

Assembling is finished, it will looks like the picture, please check carefully